MAGNASONIC

For Customer Assistance Call:

Pour Joindre le Service d'assistance à la Clientèle, Composez le:

1-800-663-5954

IP870k

iPod Docking Station with AM/FM Radio

French Model Name

Made for iPod

USER'S GUIDE
GUIDE DE L'UTILISATEUR

Thank you for your purchase of this Magnasonic product. Please read this instruction manual carefully before using product to ensure proper use. Keep this manual in a safe place for future reference.

Merci d'avoir fait l'achat de cet appareil Magnasonic. Veuillez lire le présent guide attentivement avant de faire fonctionner l'appareil pour vous assurer de l'utiliser correctement. Conservez le présent guide dans un endroit sûr afin de pouvoir vous y référer au besoin.

www.magnasonic.ca

TABLE OF CONTENTS

What's In The Box ——— 2
Warnings ——— 3
Important Safety Instructions ——— 4
Getting Started ——— 5
  Powering the Unit On ——— 5
  Battery Installation ——— 5
Radio Operation ——— 5
  FM Antenna ——— 5
iPod Operation ——— 5
  Listening to Older iPod's ——— 6
  Charging Your iPod ——— 6
Troubleshooting ——— 7
Specifications ——— 7

MAGNASONIC Warranty ——— 8

What's In The Box

- iPod Docking Station and AM/FM Radio
- AC Power Cord
- iPod Bracket
- User Manual

WARNINGS

WARNING

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, clothing, etc.
- No open flame source, such as a lit candle, should be placed on the apparatus.
- It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as a vase, shall be placed on the apparatus.
- Do not place the product in closed bookcases or racks without proper ventilation.
- The batteries (Battery pack or installed batteries) shall not be exposed to excessive heat such as direct sunlight, fire or the like.
- Excessive volume from earphones and headphones can cause hearing loss.
- The wall outlet that the main AC plug of the unit is connected to, should not be obstructed OR should be easily accessible during intended use

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ THESE IMPORTANT SAFETY INSTRUCTIONS

- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as a vase, shall be placed on apparatus
- To be completely disconnected, the main AC plug of the apparatus shall be disconnected from the outlet. The wall outlet that the main AC plug of the apparatus is connected to, should not be obstructed OR should be easily accessible during intended use
- The marking information is located at the bottom of apparatus
- The caution marking is located at the bottom of apparatus
- The battery shall not be exposed to excessive heat such as direct sunlight, radiators, fire, etc.

Portable Cart Warning

BUTTONS AND CONNECTIONS

Front of Unit

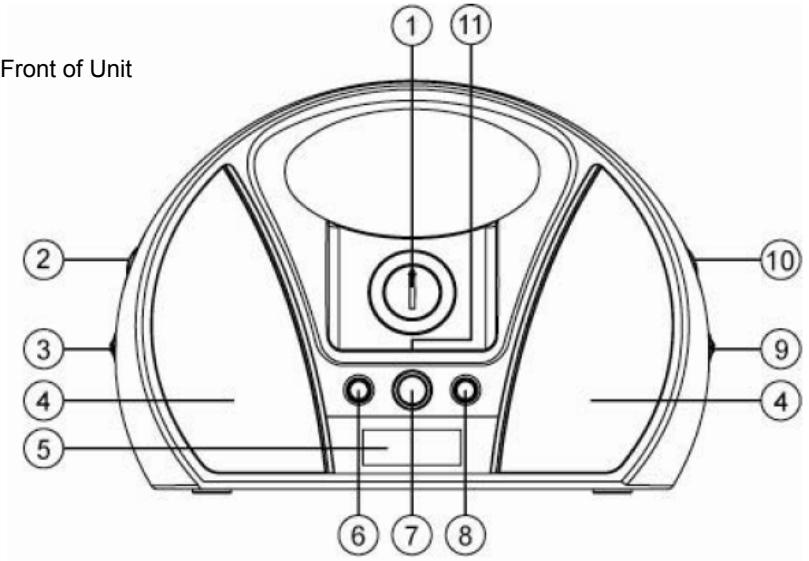

Back of Unit

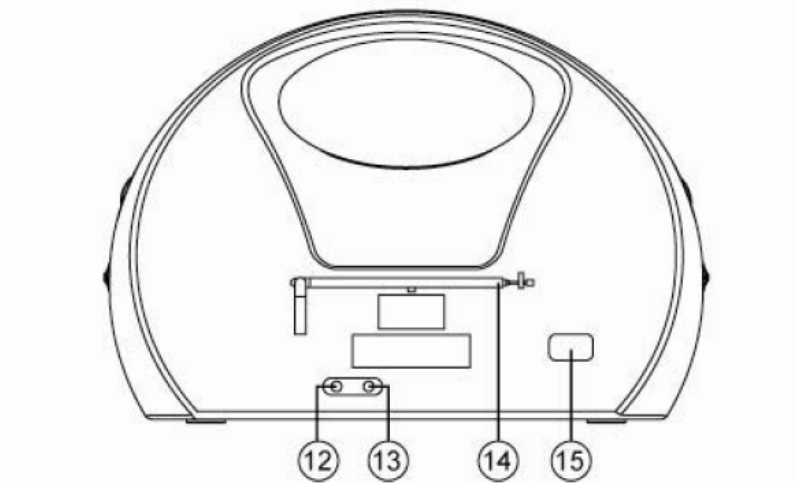

1. Adjustable Dock Dial
2. Volume Control
3. Function Switch [Radio / iPod / AUX(OFF)]
4. Speaker
5. LCD Display
6. Skip Down Button
7. Play/Pause Button
8. Skip Up Button
9. Band Switch
10. Tuning Control
11. iPod Connector
12. Earphone Jack
13. Aux In Jack
14. FM Antenna
15. AC Socket

GETTING STARTED

Powering the Unit On:

Connect the AC power cord to the AC socket on the back of the unit, plug the other end of the power cord from the unit into an appropriate 120V ~ 60Hz power outlet.

Battery Installation:

1. Disconnect the main AC plug from the wall outlet to ensure there is no power to the unit.
2. Remove the battery compartment door on the bottom of the unit.
3. Install 8 UM-2 size “C“ batteries into the compartment, ensuring the polarity is correct.

Note: Installing the batteries incorrectly can cause the unit to malfunction or become damaged.

RADIO OPERATION

Choosing a Station and Listening to the Radio:

1. Set the FUNCTION switch to the RADIO position.
2. Set the BAND switch to your choice of radio reception, AM or FM, the current radio station will be displayed on the LCD screen on the front of the unit.
3. Adjust the TUNING control to tune to your desired radio station.
4. Adjust the VOLUME control to your desired level.

FM Antenna:

For best reception of FM radio stations, fully extend the antenna, adjust to hear the best reception. For AM reception, the antenna is built into the unit, rotate the whole unit to find best reception.

iPOD OPERATION

Note: Turn off your iPod before docking on the unit.

1. Turn the ADJUSTABLE DOCK dial until the arrow points to your model of iPod. For iPod models or MP3 players not listed on the dial, manually adjust the dial to the depth that fits your iPod best.
2. Set the FUNCTION switch to the iPod position.
3. Place your iPod on the connector, the iPod will turn on automatically.
4. Press the PLAY/PAUSE button to start and stop playback of the iPod.
5. Press the SKIP UP button to go to the next track.
6. Press the SKIP DOWN button to go back to the beginning of a track, press the SKIP DOWN button twice to go to the previous track.
7. Adjust the VOLUME control to your desired level.

iPOD OPERATION CONTINUED

Listening to Older iPods, iPod Shuffle, and other portable audio devices:

1. If using an older iPod, iPod shuffle, MP3 player, or other portable device, connect the auxiliary cable from the headphone jack on the MP3 player, to the AUX-IN jack on the back side of the unit.
2. Set the FUNCTION switch to the AUX/OFF position.
3. Use the controls on your iPod or MP3 player regularily to adjust the volume, and to control the playback of the MP3 player.
4. You may also have to adjust the VOLUME control on the unit if playback is too quiet or loud.

Charging Your iPod:

While your iPod is docked, powered on, and the docking unit is connected to AC power, the docking unit will charge the iPod until fully charged.

Note: The iPod will not charge during radio receiving.

TROUBLESHOOTING

Symptom	Possible Problem	Solution
Unit does not respond (appears to have no power)	Main AC cord is not plugged into an outlet, or the AC plug is not plugged into the back of the unit	• Ensure that the main AC plug is plugged into an electrical wall outlet • Ensure the AC plug is plugged into the back of the unit
	Wall outlet is not functional	• Try plugging another device you know to be functional in the same outlet to ensure the outlet has power
iPod does not dock properly	Using an incorrect iPod bracket	• Ensure the iPod bracket is the proper one for your model of iPod
	iPod is not installed on the connector properly	• Remove your iPod from the dock and check for any obstruction on the connectors in the dock and on your iPod, then re-seat it in the dock
iPod does not respond to the unit when docked	iPod is not installed on the connector properly	• Remove your iPod from the dock and check for any obstruction on the connectors in the dock and on your iPod, then re-seat it in the dock
	iPod software is too old	• Update software on your iPod from the Apple Website For details please visit: www.apple.com/ipod/download Note: Apple has no affiliation with the Magnasonic Brand whatsoever.
No sound coming from speakers	Input source volume is low	• Increase the volume on the audio source, and then on the unit itself if volume is still too low

SPECIFICATIONS

Frequency Range	AM 540 - 1600 KHz FM 88 - 108 MHz
Power Supply	AC 120V ~ 60 Hz DC 12V (8 x UM-2 Size ‘C‘ Batteries)